COOLCHEF


INSTALLATION & OPERATION MANUAL

Refrigerators & Freezers

1 Door **23 Cu.Ft**	2 Door **49 Cu.Ft**	4 Door **49 Cu.Ft**	3 Door **72 Cu.Ft**
VF23D1 VR23D1 VR23G1	VF49D2 VR49D2 VF49G2 VR49G2	VF49D4 VR49D4	VF72D3 VR72D3 VF72G3 VR72G3





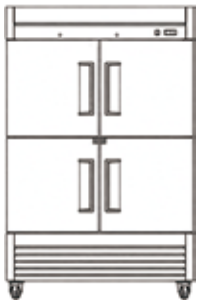



Warning:

Improper installation, adjustment, alteration, service, or maintenance can cause property damage, injury, or death Read the installation, operating. and maintenance instructions thoroughly before installing or servicing this equipment. If installing the fryer with propane (LP) gas, a commercially approved regulator MUST be installed on the fryer in addition to the tank regulator Units installed without an external appliance regulator will cause damage to parts and will void the warranty.

For Your Safety:

Do not store or use gasoline or other flammable vapors orliquids in the vicinity of this or any other appliance.

Note:

Please read instructions thoroughly. Indoor use only.

TABLE OF CONTENTS

SAFETY PRECAUTIONS

1. NOTICE 1
2. FOR HYDROCARBON REFRIGERATION UNITS 2
3. IMPORTANT SAFETY INFORMATION 3
4. INSTALLATION & USAGE 4
5. SPECIFICATIONS 5
6. BASIC OPERATION 7
7. CONTROLLER OPERATION 7
8. DEFROSTING 10
9. CLEANING 11
10. BEFORE YOU CALL FOR SERVICE 13
11. TROUBLESHOOTING 13
12. OLD APPLIANCE DISPOSAL 14
13. COMPLIANCE 14

1. NOTICE

- This equipment is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge unless they have been given supervision or instructions concerning the use of this equipment and the hazards involved by a person responsible for their safety.
- The special instructions for those persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, are not included in this manual and are not required to be included.
- Children shall not play with the appliance.
- Cleaning and user maintenance shall not be made by children without supervision.

This manual uses the following safety symbols. These safety symbols with the words of DANGER, WARNING or CAUTION alert users of the potential hazards that could cause injury or even death.

Safety Alert Definitions

DANGER	Indicates an immediate hazardous situation that, if not avoided, will result in death or serious injury.
WARNING	Indicates a hazardous situation that, if not avoided, could result in death or serious injury.
CAUTION	Indicates a hazardous situation that may result in minor or moderate injury or equipment/property damage.

NOTICE:
Indicates important information that requires special attention butis not related to personal injury.

2. FOR HYDROCARBON REFRIGERATION UNITS

WARNING:

This unit uses R-290 (propane) as a refrigerant. These hydrocarbon refrigerants are highly environmentally compatible but also are flammable and combustible. Please read this manual thoroughly before installing and operating the unit. Please take cautious measures to avoid risk of fire or explosion.

DANGER:

Risk of fire or explosion. Flammable refrigerant used. Do not use mechanical devices to defrost refrigerator. To be repaired only by trained service personnel. Do not puncture refrigerant tubing.

CAUTION:

Risk of fire or explosion. Dispose of properly in accordance with federal or local regulations. Flammable refrigerant used.

CAUTION:

Risk of fire or explosion. Flammable refrigerant used. Consult repair manual/owner's guide before attempting to service this product. All safety precautions must be followed.

CAUTION:

Risk of fire or explosion due to puncture of refrigerant tubing; follow handling instructions carefully. Flammable refrigerant used.

WARNING:

- Keep ventilation openings, in the appliance enclosure or in the built-in structure, clear of obstruction.
- Do not use mechanical devices or other means to accelerate the defrosting process, other than those recommended by the manufacturer.
- Do not damage the refrigerant circuit.
- Do not use electrical appliances inside the food storage compartments of the appliance unless they are of a type recommended by the manufacturer.
- Handle the unit with care in order to avoid any serious damage to the refrigeration system.
- The refrigerant tubing, condenser, and evaporator coils are easily prone to damage while handling, moving, installing, and cleaning the unit, which may lead to fire or even explosion.
- Refrigerant squirting out of the pipes could ignite or cause an eye injury. If a leak is detected, avoid any naked flames or potential sources of ignition and air the room in which the appliance is located.

WARNING:

- To avoid the creation of a flammable gas-air mixture from a leakingg refrigerating circuit, the size of the room in which the appliance is placed depends on the amount of refrigerantused. The room must be 35.31fts (1ma) in size for every 0.28oz (8g) of R-600a refrigerant inside the appliance. Thamount of refrigerant in your particular appliance is shown on the label inside the cabinet.
  This appliance contains a small amount of propane (R-290) , a natural gas with high environmental compatibility, but it is also combustible. When transporting and installing the appliance, ensure that no part of the refrigerating circuit is damaged.
- Never start up an appliance showing any signs of damage. When in doubt, contact a qualified service professional.
- In case of any hazardous activities such as fire or explosion, move the unit away from any source of ignition to a well ventilated area.
- Further service and repair must be done by a qualified technician who is familiar with the safety standards, and also has thorough understanding and knowledge of the flammable refrigerants.
- Any and all technicians handling these units must be equipped with proper personal protection and equipment and follow applicable safety measures and precautions to avoid risk of fire or explosion.

3. IMPORTANT SAFETY INFORMATION

To avoid any risk of fire, explosion, electric shock, personal injury, material damage or incorrect use of the appliance, be sure to observe the following safety precautions.

(After reading these owner's manual instructions, please keep the manual booklet in a safe place for reference. Remember to hand it over to any subsequent owners).

WARNING:

- The unit must be installed and located in accordance with the manufacturer's installation instructions.
- Installation work must be performed in accordance with the National Electric Code by qualified and authorized personnel only.
- Repairs and replacement work must be performed by a qualified and authorized service professional only using genuine replacement parts (Component parts shall be replaced with like components).
- Do not use an extension cord or an adapter plug. Because of the potential safety hazards under certain conditions, we strongly recommend against any use of an extension cord or an adapter plug.
- Do not, under any circumstances, cut or remove the ground prong from the power cord. For personal safety, this appliance must be properly grounded.
- Do not store volatile and flammable substances in the refrigerator. The storage of benzene, thinner, alcohol, ether, LP gas, or other explosive substances may cause an explosion.
- Do not store or use gasoline or other flammable vapors and liquids in the vicinity of this appliance as well as any other appliances.
- The appliance is not intended for use by children without supervision.
- Do not allow children to climb, stand, or hang on the refrigerator doors or shelves in the refrigerators. They could damage the refrigerator and seriously injure themselves.
- To prevent suffocation and entrapment hazards to children, remove the doors and seals from the refrigerator before disposing of it or discontinuing its use.

4. INSTALLATION & USAGE

WARNING:

- Do not install the unit in a damp place where it could be splashed with water. Incorrect insulation of the electrical parts may cause fire or electric shock.
- Do not plug several appliances into the same sockets. This could cause fire due to overheating.
- Keep the power plug away from the rear of the cabinet. A damaged power plug may cause fire due to overheating.
- Do not spray water directly to the interior or exterior of the appliance. There is a risk of fire or electric shock.
- Do not place any containers filled with water on top of the appliance. If the water spills onto any electrical parts, it may lead to fire or electric shock.
- Do not attempt to repair, disassemble or alter the appliance. It may cause fire or abnormal operations which may lead to injury.
- Unplug the refrigerator before making repairs, replacing a light bulb, or cleaning.
- Plug into a grounded 3-prong outlet. Do not remove the ground prong.

CAUTION:

- Do not store too much food in the appliance. When you open the door, an item may fall out and cause personal injury or material damage.
- Do not put bottles or any kind of glass in the freezer. The container may break and cause personal injury.
- Do not disconnect the power cord by pulling on it. This may disconnect a wire and cause a short circuit.
- There is a risk of death from suffocation if a child puts the packing materials on his or her head.
- Do not store any articles on top of the appliance. Articles may fall while opening or closing the door, and could cause personal injury or material damage.
- Do not store pharmaceutical products, scientific materials or other temperature-sensitive products in the refrigerator. Products that require strict temperature controls must not be stored in the refrigerator.
- Do not let children hang on the door.
- Do not touch any cold surfaces or food containers in the freezer with damp or wet hands. Skin may stick to these extremely cold surfaces and may cause frostbite.
- Remove any foreign matter from the power plug pins. Otherwise, there is a risk of fire.
- Do not insert your hand into the bottom area of appliance. Any sharp edges may cause personal injury.
- After unplugging the appliance, wait at least five minutes before plugging it back in. Abnormal operation of the freezer may cause material damage.
- If the appliance is not used for a long period of time, unplug it from the power supply. Any deterioration in the insulation may cause fire.
- Do not let children touch or play with the control panel on the front of the appliance.
- Do not allow children to play with this appliance.
- Do not stand or lean on the base panel, pull-out parts, or doors.
- Repairs and maintenance of the appliance should only be performed by a qualified technician. Incorrect repairs done by an unqualified person may be a potential source of danger that could have critical consequences for the user of the appliance.
- Never put ice cubes or ice pops straight from the freezer into your mouth. The low temperature may cause cold burns.

5. SPECIFICATIONS

5.1 Refrigerators

MODEL	Rating Temp.(OF)	Operating Temp.(°F)	V/Hz	REFRIGERANT	AMPS
VR-23D1	33~39°F	<100°F	110~120V/60Hz	R-290	2.19A
VR-23D2	33~39°F	<100°F	110~120V/60Hz	R-290	2.19A
VR-49D2	33~39°F	<100°F	110~120V/60Hz	R-290	2.92A
VR-49D3	33~39°F	<100°F	110~120V/60Hz	R-290	2.92A
VR-49D4	33~39°F	<100°F	110~120V/60Hz	R-290	2.92A
VR-72D3	33~39°F	<100°F	110~120V/60Hz	R-290	3.61A
VR-72D4	33~39°F	<100°F	110~120V/60Hz	R-290	3.61A
VR-72D5	33~39°F	<100°F	110~120V/60Hz	R-290	3.61A
VR-72D6	33~39°F	<100°F	110~120V/60Hz	R-290	3.61A
VR-23G1	33~39°F	<86°F	110~120V/60Hz	R-290	2.19A
VR-23G2	33~39°F	<86°F	110~120V/60Hz	R-290	2.19A
VR-23G1-B	33~39°F	<86°F	110~120V/60Hz	R-290	2.19A
VR-23G2-B	33~39°F	<86°F	110~120V/60Hz	R-290	2.19A
VR-23G1-BL	33~39°F	<86°F	110~120V/60Hz	R-290	2.19A
VR-23G2-BL	33~39°F	<86°F	110~120V/60Hz	R-290	2.19A
VR-49G2	33~39°F	<86°F	110~120V/60Hz	R-290	2.92A
VR-49G3	33~39°F	<86°F	110~120V/60Hz	R-290	2.92A
VR-49G4	33~39°F	<86°F	110~120V/60Hz	R-290	2.92A
VR-49G2-B	33~39°F	<86°F	110~120V/60Hz	R-290	2.92A
VR-49G3-B	33~39°F	<86°F	110~120V/60Hz	R-290	2.92A
VR-49G4-B	33~39°F	<86°F	110~120V/60Hz	R-290	2.92A
VR-49G2-BL	33~39°F	<86°F	110~120V/60Hz	R-290	2.92A
VR-49G3-BL	33~39°F	<86°F	110~120V/60Hz	R-290	2.92A
VR-49G4-BL	33~39°F	<86°F	110~120V/60Hz	R-290	2.92A
VR-49G2-BS	33~39°F	<86°F	110~120V/60Hz	R-290	2.92A
VR-49G4-BS	33~39°F	<86°F	110~120V/60Hz	R-290	2.92A
VR-72G3	33~39°F	<86°F	110~120V/60Hz	R-290	3.63A
VR-72G4	33~39°F	<86°F	110~120V/60Hz	R-290	3.63A
VR-72G5	33~39°F	<86°F	110~120V/60Hz	R-290	3.63A
VR-72G6	33~39°F	<86°F	110~120V/60Hz	R-290	3.63A
VR-72G3-B	33~39°F	<86°F	110~120V/60Hz	R-290	3.63A
VR-72G4-B	33~39°F	<86°F	110~120V/60Hz	R-290	3.63A
VR-72G5-B	33~39°F	<86°F	110~120V/60Hz	R-290	3.63A
VR-72G6-B	33~39°F	<86°F	110~120V/60Hz	R-290	3.63A
VR-72G3-BL	33~39°F	<86°F	110~120V/60Hz	R-290	3.63A
VR-72G4-BL	33~39°F	<86°F	110~120V/60Hz	R-290	3.63A
VR-72G5-BL	33~39°F	<86°F	110~120V/60Hz	R-290	3.63A
VR-72G6-BL	33~39°F	<86°F	110~120V/60Hz	R-290	3.63A
VR-72G3-BS	33~39°F	<86°F	110~120V/60Hz	R-290	3.63A
VR-72G6-BS	33~39°F	<86°F	110~120V/60Hz	R-290	3.63A

5.2 Freezers

MODEL	Rating Temp.(OF)	Operating Temp.(°F)	V/Hz	REFRIGERANT	AMPS
VF-23D1	-8~-2°F	<100°F	110~120V/60Hz	R-290	3.83A
VF-23D2	-8~-2°F	<100°F	110~120V/60Hz	R-290	3.83A
VF-49D2	-8~-2°F	<100°F	110~120V/60Hz	R-290	7.28A
VF-49D3	-8~-2°F	<100°F	110~120V/60Hz	R-290	7.28A
VF-49D4	-8~-2°F	<100°F	110~120V/60Hz	R-290	7.28A
VF-72D3	-8~-2°F	<100°F	110~120V/60Hz	R-290	7.28A
VF-72D4	-8~-2°F	<100°F	110~120V/60Hz	R-290	7.28A
VF-72D5	-8~-2°F	<100°F	110~120V/60Hz	R-290	7.28A
VF-72D6	-8~-2°F	<100°F	110~120V/60Hz	R-290	7.28A
VF-23G1	-8~-2°F	<86°F	110~120V/60Hz	R-290	6.00A
VF-23G2	-8~-2°F	<86°F	110~120V/60Hz	R-290	6.00A
VF-23G1-B	-8~-2°F	<86°F	110~120V/60Hz	R-290	6.00A
VF-23G2-B	-8~-2°F	<86°F	110~120V/60Hz	R-290	6.00A
VF-23G1-BL	-8~-2°F	<86°F	110~120V/60Hz	R-290	6.00A
VF-23G2-BL	-8~-2°F	<86°F	110~120V/60Hz	R-290	6.00A
VF-49G2	-8~-2°F	<86°F	110~120V/60Hz	R-290	11.30A
VF-49G3	-8~-2°F	<86°F	110~120V/60Hz	R-290	11.30A
VF-49G4	-8~-2°F	<86°F	110~120V/60Hz	R-290	11.30A
VF-49G2-B	-8~-2°F	<86°F	110~120V/60Hz	R-290	11.30A
VF-49G3-B	-8~-2°F	<86°F	110~120V/60Hz	R-290	11.30A
VF-49G2-BL	-8~-2°F	<86°F	110~120V/60Hz	R-290	11.30A
VF-49G3-BL	-8~-2°F	<86°F	110~120V/60Hz	R-290	11.30A
VF-49G2-BS	-8~-2°F	<86°F	110~120V/60Hz	R-290	11.30A
VF-72G3	-8~-2°F	<86°F	110~120V/60Hz	R-290	12.30A
VF-72G4	-8~-2°F	<86°F	110~120V/60Hz	R-290	12.30A
VF-72G5	-8~-2°F	<86°F	110~120V/60Hz	R-290	12.30A
VF-72G6	-8~-2°F	<86°F	110~120V/60Hz	R-290	12.30A
VF-72G3-B	-8~-2°F	<86°F	110~120V/60Hz	R-290	12.30A
VF-72G4-B	-8~-2°F	<86°F	110~120V/60Hz	R-290	12.30A
VF-72G5-B	-8~-2°F	<86°F	110~120V/60Hz	R-290	12.30A
VF-72G6-B	-8~-2°F	<86°F	110~120V/60Hz	R-290	12.30A
VF-72G3-BL	-8~-2°F	<86°F	110~120V/60Hz	R-290	12.30A
VF-72G4-BL	-8~-2°F	<86°F	110~120V/60Hz	R-290	12.30A
VF-72G5-BL	-8~-2°F	<86°F	110~120V/60Hz	R-290	12.30A
VF-72G6-BL	-8~-2°F	<86°F	110~120V/60Hz	R-290	12.30A
VF-72G3-BS	-8~-2°F	<86°F	110~120V/60Hz	R-290	12.30A
VF-72G6-BS	-8~-2°F	<86°F	110~120V/60Hz	R-290	12.30A

5.3 SERIAL NUMBER

The serial number is located on the back of the product.
Please retain the unit's serial number for service purpose.


NOTICE:
Loss or spoilage of products in your refrigerator/freezer is not covered by warranty.
In addition to following recommended installation procedures, you must run the refrigerator/freezer 24 hours prior to usage.

6. BASIC OPERATION

1. Plug unit into the correct outlet. The power switch is located on the back side of the unit. Flip the power switch ON. Display panel should light up if these steps are followed correctly.
2. The default temperature ("Set Point") is set to 37°F (for Refrigerators).
3. The compressor is set to automatically cycle based on the cabinet temperature, and is controlled by the main PCB ("Controller").
4. The defrost cycle is set to automatically cycle and is controlled by the Controller.

7. CONTROLLER OPERATION

7.1 CAREL TEMPERATURE CONTROLLER

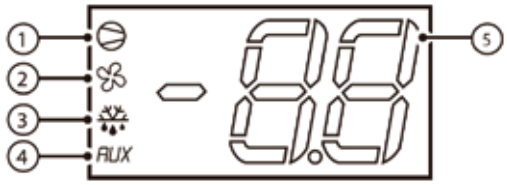

index	function	normal operation			start up
		ON	OFF	blink	
1	compressor	on	off	request	on
2	fan	on	off	request	on
3	defrost	on	off	request	on
4	aux	output on	output off	-	on
5	digit	2 digit LED display with sign (-99 to 99) and decimal point			

Table of functions activated by the buttons



button	normal operation		start up	
	pressing the button alone	pressed together		
	normal opemore than 3 s: toggle ON/OFF	pressed together display defrost probe temp.	-	
	more than 3 s: start/stop defrost		Pressed together start parameter reset procedure	For 1 s: display firmware vers. code
set	1 s: display/set the set point More than 3 s: access parameter setting menu(enter password '22')	-		

7.2 SET POINT CHANGE

Fixed settings

- Minimum compressor ON time is 1 minute;
- If there is no defrost relay, the compressor will be shut down for defrost;
- Freeze the display when defrost, it returns when the temperature reaches the set point;

Setting the set point (desired temperature)

- press set for 1 s, the set value will start flashing after a few moments;
- increase or decrease the value using or ;
- press set to confirm the new value.

Switching the device ON/OFF

press for more than 3 s. The control and defrost algorithms are now disabled and the instrument displays the message"OFF" alternating with the temperature read by the set probe.

Manual defrost (only for models C/Y)

press down for DOWN more than 3 s (the defrost starts only the temperature conditions are valid).

Show defrost probe temperature(only for models C/Y)

press and together.

Access and setting type F (frequent) and type C (configuration) parameters

- press set for 3 s (the display will show "PS");
- to access the type F and C parameter menu, enter the password "22"using / .
- to access the F parameter menu only, press set (without entering the password);
- scroll inside the parameter menu using / .

To display/set the values of the parameter displayed, press set , then / and finally to confirm the changes (returning to the parameter menu).

To save all the new values and exit the parameter menu, press set for 3 s;

To exit the menu without saving the changed values (exit by timeout) do not press any button for at least 60s.

7.3 TABLE OF ALARMS

Alarm code		LED	Description	Parameters involved
E0		ON	probe 1 error = control	-
E1(*)		ON	probe 2 error = defrost	[d0 = 0 / 1]
dr(*)		ON	open door alarm	
Lo		ON	low temperature alarm	[AL] [Ad][Ao]
HI		ON	high temperature alarm	[AH] [Ad][Ao]
EEI		ON	unit parameter error	-
EF		ON	operating parameter error	-

8. DEFROSTING

Refrigerator belongs to stop defrost, please manually defrost at least once a month.

Freezer with automatic defrosting function, no manual defrosting. The product automatically removes the frost every 6h.

Note:
The cycle starts from the time the appliance is initially powered up.

For freezer to manually defrost the appliance:

1. Press and hold the DEFROST button for 5 seconds
2. The defrost cycle will start immediately and the Defrost LED illuminates. The defrost will last 20 minutes.

Note:
Starting a manual defrost also resets the automatic defrost timer.
The next automatic defrost will start 12 hours after the manual defrost has finished.

9. CLEANING

Before cleaning, unplug the unit and disconnect the power.
Wipe and clean the inside and outside of appliance with a damp cloth.

9.1 CLEANING THE INTERIOR AND EXTERIOR

- The interior and exterior of the unit can be cleaned using warm water and soap.
- Do not use an abrasive cleaner because it will scratchthe surface.

9.2 CLEANING THE CONDENSER COIL

- To maintain proper refrigeration performance, the Condernser coil must be free of dust, dirt, and grease. This will require periodic cleaning. Condenser coil sholuld be cleaned at least every tthree months (90 days) or as needed.
- To clean the condenser, unplug the power cord. Condenser cain be cleaned with vacuum, brush, or CO2 (high pressure air).

9.3 Stainless Steel Equipment Care and Cleaning

CAUTION:
Do not use any steel wool, abrasive or chlorine based products to clean stainless steel surfaces.

There are three basic things which can break down your stainless steel's passivity layer and allow corrosion to occur.

1. Using the correct cleaning tools: Use non-abrasive tools when cleaning your stainless steel products. The stainless steel's passive layer will not be harmed by soft cloths and plastic scouring pads. Step 2 tells you how to find the polishing marks.
2. Cleaning along the polish lines: Polishing lines or "grain" are visible on some stainless steels. Always scrub parallel to visible lines on some stainless steels. Use a plastic scouring pad or soft cloth when you cannot see the grain.
3. Use alkaline, alkaline chlorinated or non-chloride containing cleaners: While many traditional cleaners are loaded with chlorides, the industry is providing an ever increasing choice of nonchloride cleaners. If you are not sure of your cleaner's chloride content, contact your cleaner supplier. If they tell you that your present cleaner contains chlorides, ask if they have an alternative. Avoid cleaners containing quaternary salts as they can attack stainless steel, causing pitting and rusting.

8 steps that can help prevent rust on stainless steel:

1. Using the correct cleaning tools: Use non-abrasive tools when cleaning your stainless steel products. The stainless steel's passive layer will not be harmed by soft cloths and plastic scouring pads. Step 2 tells you how to find the polishing marks.
2. Cleaning along the polish lines: Polishing lines or "grain" are visible on some stainless steels. Always scrub parallel to visible lines on some stainless steels. Use a plastic scouring pad or soft cloth when you cannot see the grain.
3. Use alkaline, alkaline chlorinated or non-chloride containing cleaners: While many traditional cleaners are loaded with chlorides, the industry is providing an ever increasing choice of nonchloride cleaners. If you are not sure of your cleaner's chloride content, contact your cleaner supplier. If they tell you that your present cleaner contains chlorides, ask if they have an alternative. Avoid cleaners containing quaternary salts as they can attack stainless steel, causing pitting and rusting.
4. Water Treatment: To reduce deposits, soften the hard water when possible. Installation of certain filters can remove corrosive and distasteful elements. Salts in a properly maintained water softener can be to your advantage. Contact a treatment specialist if you are not sure of the proper water treatment.
5. Maintaining the cleanliness of your food equipment: Use cleaners at recommended strength (alkaline, alkaline chlorinated or non-chloride). Avoid build-up of hard stains by cleaning frequently. When boiling water with your stainless steel equipment, the single most likely cause of damage is chlorides in the water. Heating nay cleaners containing chlorides will have the same damaging effects.
6. Rinse: When using chlorinated cleaners you must rinse and wipe dry immediately. It is better to wipe standing cleaning agents and water as soon as possible. Allow the stainless steel equipment to air dry. Oxygen helps maintain the passivity of the film on stainless steel.
7. Hydrochloric acid (muriatic acid) should never be used on stainless steel.
8. Regularly restore/passivate stainless steel.

Recommended cleaners for certain situation/environments of stainless steel:

- Soap, ammonia and detergent medallion applied with a cloth or sponge can be used for routine cleaning.
- Arcal 20, Lac-O-Nu Ecoshine provides barrier film for fingerprints and smears.
- Cameo, Talc, Zud First Impression is applied by rubbing in the direction of the polished lines for stubborn stains and discoloring.
- Easy-off and De-Grease it oven aid are excellent for removals on all finishes for grease-fatty acids, blood and burnt-on foods.
- Any good commercial detergent can be applied with a sponge or cloth to remove grease and oil.
- Benefit, Super Sheen, Sheila Shine are good for restoration/passivation.

10. BEFORE YOU CALL FOR SERVICE

Before contacting our Service Department, review the detailed troubleshooting tips in the Owner's manual.

1. Try to remedy the problem. Please read the "Troubleshooting Guide" section.
2. Restart the appliance to check whether the fault repeats. If the malfunction persists, switch off the appliance and try again after an hour.
3. If the malfunction still persists, then contact our Customer Service, specifying:

- The nature of the problem
- The appliance model number and serial number
- Your full address, telephone number and area code

11. TROUBLESHOOTING

SYMPTOMS	Probable Cause	SOLUTIONS
Cooler is freezing food.	• Thermostat set too cold.	• Turn the thermostat setting to a higher temperature position.
The unit does not refrigerate at all.	• There is a power connection failure problem.	• Check the power cord and plug in correctly.
The unit does not refrigerate well.	• The unit is in sunlight or near a heating device. • The unit contains hot food or too much food. • The unit door is opened too frequently or left open too long. • The temp. dial is not on the correct position. • The condenser is clogged.	• Check the installation location. • Check the condition of stored food. • Check the position of the temp control dial.
There is a loud noise.	• The floor is too weak or the leveling feet are set incorrectly. • The backside of the unit is too close to the wall.	• Check the installation.
There are dewdrops on the unit exterior.	• High-moisture air can produce • dewdrops during rainy seasons.	• Wipe with a dry cloth.
There are dewdrops on the unit interior.	• The door is opened too frequently or left open too long. • Damp food is stored.	• Keep the door closed to remove dewdrops.
The door does not close tightly.	• The door is bent. • The unit is not leveled off. • The door gasket has come off.	• Level the unit again. • Reposition the gasket.

The following points are not malfunctions:

- A water-flowing sound can be heard when the compressor stops. This is the sound of REFRIGERANT flowing.
- The compressor does not run during the defrost cycle.

Note:
Formation of condensation on and around the edge of the door and the front side of the cabinet is normal. Gurgling noises inside the refrigerating circuit are normal.

12. OLD APPLIANCE DISPOSAL

For environmental purposes, refrigeration appliances must be properly disposed. This applies to your old appliance, and at the end of its service life, for your new appliance as well.

WARNING:
Before disposing of old appliances, make them inoperable. Remove plug from mains,severe the power cable, and remove or destroy any snap or latch closures.This eliminates the danger of any children locking themselves into the appliance (danger of suffocation) or placing themselves into other life-threatening situations.

- The appliance may not be disposed of with domestic waste or bulky refuse.
- The refrigerant circuit, especially the heat exchanger at the back of the appliance, may not be damaged.
- Information concerning collection schedules or locations can be obtained from the local disposal authorities.

CAUTION:
The refrigeration used in refrigerator/freezer and the gases in the insulation material require special disposal procedures. Ensure that none of the pipes on the back of the appliance are damaged prior to disposal.

13. COMPLIANCE

Parts have undergone strict product testing in order to comply with regulatory standards and specifications set by international, independent, and federal authorities.
ALL THE RESPONSIBILITY FOR THE FAILURE TO RESPECT THE EXISTING LECAL STATUTES ARE THE RESPONSIBILITY OF THE OWNER.
ALL TYPES AND MODELS ARE SUBJECT TO CONTINUOUS IMPROVEMENT AND MANUFACTURER THEREFORE RESERVES THE RIGHT TO MAKE MODIFICATIONS TO THE SHAPE, EQUIPMENT AND TECHNOLOGY.